

HSS AIR HANDLER - LEFT RETURN CAD CONFIGURATIONS



HORIZONTAL / LEFT RETURN / RIGHT FLOW



LEFT RETURN / UP FLOW



LEFT RETURN / DOWN FLOW

NOTE: LOCATION OF INLET/OUTLET CONNECTIONS ARE SHOWN ABOVE REFLECT THE 3,4 & 5 TON UNITS

HSS AIR HANDLER - RIGHT RETURN CAD CONFIGURATIONS



HORIZONTAL / RIGHT RETURN / LEFT FLOW



RIGHT RETURN / UP FLOW



RIGHT RETURN / DOWN FLOW

NOTE: LOCATION OF INLET/OUTLET CONNECTIONS ARE SHOWN ABOVE REFLECT THE 3,4 & 5 TON UNITS